



Extend-A-Line Accessories

CL-01 and CL-02 are not included with the CL-12/CL-35 but can be purchased separately.

Models: CL-01 (Bumper Mount)

CL-02 (Hitch Mount Adaptor)



Thank you for purchasing the Extend-A-Line Bumper Mount by Stromberg Carlson.

Please read all directions prior to installation.

The Extend-A-Line Bumper Mount is designed to attach to 4" square bumpers and 6" x 2" A-frames. It is intended to provide alternate mounting locations for the Stromberg Carlson Extend-A-Line. When installed properly, the Extend-A-Line Bumper Mount will carry the full load capacity of the CL-35/CL-12 (60 lb evenly spaced).

Please note the Extend-A-Line must be removed prior to travel.

CL-01 Assembly Instructions

1. Identify all carton contents are present.
2. Locate installation location on bumper/A-frame, providing ample clearance for the CL-35/CL-12 arms to fan out fully.
3. Remove the aluminum mounting bracket from the back of the housing on your CL-35/CL-12 (not provided) and attach it to the top of your bumper mount tube (5850-CL). Slide the remaining 2-1/4" long bolts (FST-1886) through the front side of the mounting bracket and secure with the flat washers (FST-1865) and lock nuts (FST-1870) on the back side of the bumper mount tube (5850-CL).
4. Determine which holes on the bumper mount tube (5850-CL) will accommodate your application (the end of the tube with three holes will mount to your bumper/A-frame, the end with 2 holes will mount to the CL-35/CL-12 bracket).
5. Slide each 6-1/2" long bolt (FST-1898) through the mounting hole locations you have identified on the bumper mount tube (5850-CL). One bolt will be across the top side of your bumper/A-frame and one bolt will be across the bottom side of your bumper/A-frame.
6. From the back side of your bumper/A-frame, slide the back plate (7605-117) over the 6-1/2" long bolts (FST-1898), with the flat side resting against the bumper/A-frame.
7. Place (1) flat washer (FST-1865) and (1) lock nut (FST-1870) on the end of each bolt and tighten until secure.
8. Insert the end cap plugs (CP-1045) into each end of the bumper mount tube (5850-CL).




#	ITEM #	DESCRIPTION	QTY
1	7605-117	Back Plate – Lower Mount	1
2	CP-1030	Round Locking Hole Plug	2
3	FST-1898	5/16 - 18 x 6-1/2" Bolt	2
4	FST-1865	5/16 Flat Washer	4
5	FST-1886	5/16 - 18 x 2-1/4" Bolt	2
6	FST-1870	5/16 - 18 Lock Nut	4
7	5850-CL	Bumper Mount Tube	1
	CP-1045	1-1/2" Square End Caps (not pictured)	2

9. Plug unused mounting holes on the bottom of the tube with the round locking hole plugs (CP-1030).
10. Slide your CL-35/CL-12 (not provided) onto the mounting bracket and enjoy!

CL-02 Assembly Instructions

1. Identify all carton contents are present (including CL-01 components).
2. Remove CL-01 Bumper Mount Tube (5850-CL) and mounting bracket from bumper/A-frame.
3. Take both Receiver Tube Angle Brackets (5851-CL) and mount onto holes located on the sides of the Receiver Tube (5853-CL) with the 2-3/4" Bolt (FST-2428) and the 1/2" Lock Nut (FST-2482) (see **Figure 1**).
4. Take both 2-1/4" Bolts (FST-1886) and slide into holes located on the Receiver Tube Angle Bracket that was installed onto the Receiver Tube in Step 3. Slide these bolts through two of the holes on the bottom of the CL-01 Bumper Mount Tube (5850-CL).
5. Put one 5/16" Flat Washer (FST-1865) and one 5/16" Lock Washer (FST-1860) onto each 5/16" Bolt (FST-1886) (see **Figure 2**).
6. Screw 5/16" Hex Nuts (FST-1870) into the back of the CL-01 until tight.
7. Insert Receiver Tube assembly into 2" hitch and secure.
8. Slide CL-35/CL-12 onto mounting bracket and enjoy!

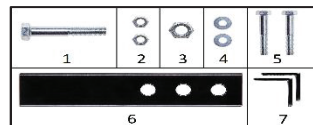

#	ITEM #	DESCRIPTION	QTY
1	FST-2428	1/2"-13 x 2 3/4" Bolt	1
2	FST-1865	5/16" Flat Washer	2
3	FST-2482	1/2" Lock Nut	1
4	FST-1870	5/16" Hex Nut	2
5	FST-1886	5/16"-18 x 2 1/4" Bolt	2
6	5853-CL	Receiver Tube	1
7	5851-CL	Receiver Tube Angle Bracket	2
	FST-1860	5/16 Lock Washer (not pictured)	2

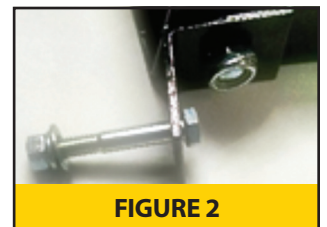


FIGURE 2



FIGURE 1